
CoPilot™ Hardware Installation Quick Start Guide—Electric Machines

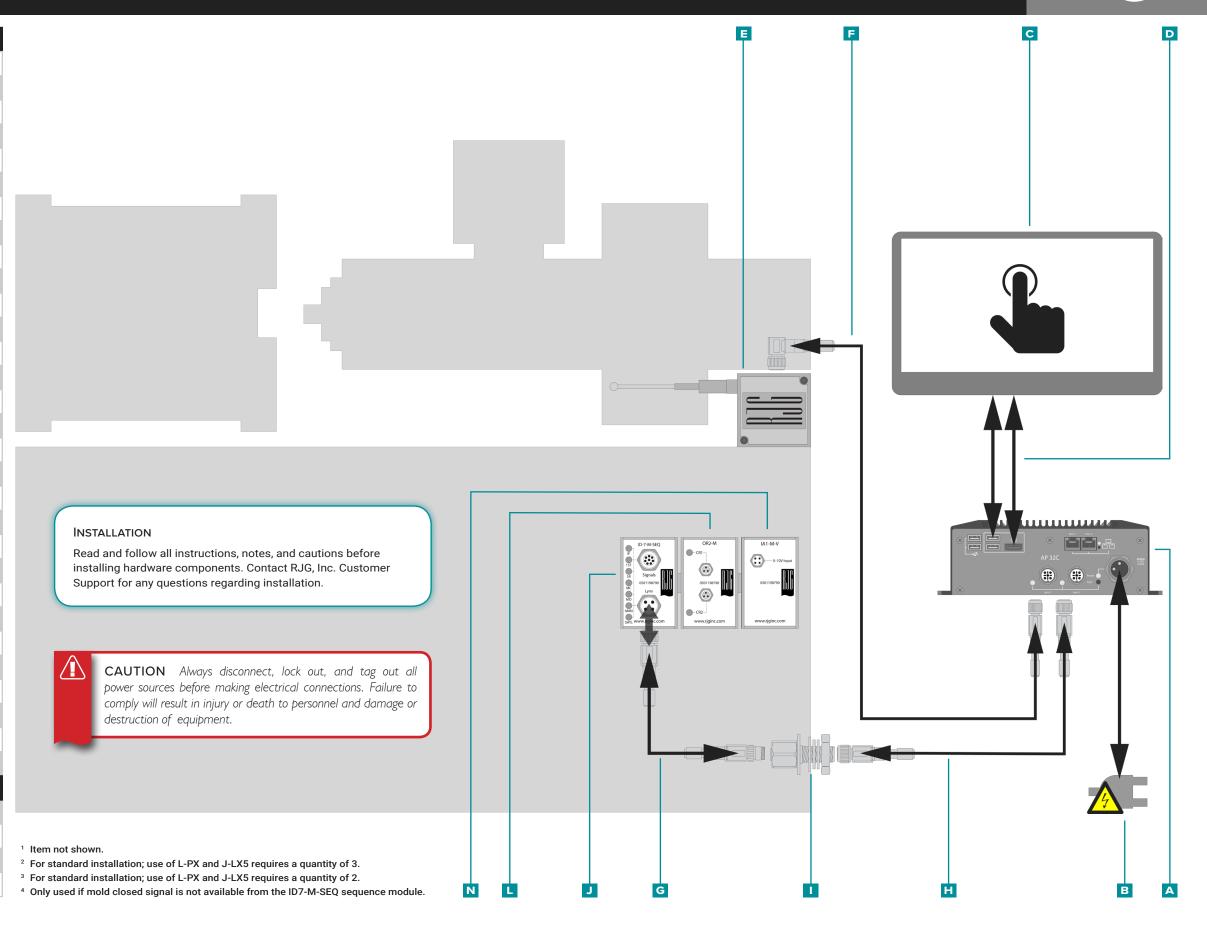

STA	NDARD EQUIPMENT	QTY
A	AP 32C	1
	Application Processor	
В	PS-AP50W-12V	1
	AP 32C Power Supply/Cable	
С	Touch Screen	1
D	Touch Screen Cables	2
	One HDMI, One USB	
E	LE-R-50	1
	Lynx 50" Stroke/Velocity Encoder	
F	CE-LX5-4M-F90	1 ³
	Lynx Four-Meter 90°Cable	
G	CE-LX5-2M	1 ²
	Lynx Two-Meter Cable	
Н	CE-LX5-4M	1 ³
	Lynx Four-Meter Cable	
1	J-LX1	1
	Lynx Single Feed-Through	
J	ID7-M-SEQ	1
	Lynx Sequence Module	
K	C-ID7-M-3M	1 ¹
	Shielded Cable for ID7-M-SEQ	
L	OR2-M	1
	Lynx Relay Module	
M	C-OR2-M-3M	2 ¹
	Shielded Cables for OR2-M	
N	IA1-M-V	1
	Lynx Analog Input Module	
0	C-IA1-M-3M	1 ¹
	Shielded Cable for IA1-M-V	
ОРТ	IONAL EQUIPMENT	QTY
P	J-LX5	1 ^{1,4}
	Lynx Five-Port Junction Box	
Q	L-PX	11,4
	Lynx Proximity Switch	



CoPilot™ Hardware Installation Quick Start Guide—Hydraulic Machines



STA	NDARD EQUIPMENT	QTY
A	AP 32C	1
	Application Processor	
В	PS-AP50W-12V	1
	AP 32C Power Supply/Cable	,
С	Touch Screen	1
D	Touch Screen Cables	2
	One HDMI, One USB	
E	LE-R-50	1
	Lynx 50" Stroke/Velocity Encoder	
F	CE-LX5-4M-F90	2 ³
	Lynx Four-Meter 90°Cable	
G	CE-LX5-2M	12
	Lynx Two-Meter Cable	
Н	CE-LX5-4M	2 ³
	Lynx Four-Meter Cable	
1	J-LX1	1
	Lynx Single Feed-Through	
J	ID7-M-SEQ	1
	Lynx Sequence Module	
K	C-ID7-M-3M	1 ¹
	Shielded Cable for ID7-M-SEQ	
L	OR2-M	1
	Lynx Relay Module	
M	C-OR2-M-3M	2 ¹
	Shielded Cables for OR2-M	
N	LS-H-1/4NPT-3K	1
	Lynx 3000# Hydraulic Sensor	
0	J-LX2-CE	1
	Lynx Two-Port Junction	
ОРТ	IONAL EQUIPMENT	QTY
P	J-LX5	1 ^{1,4}
	Lynx Five-Port Junction Box	
Q	L-PX	1 ^{1,4}
	Lynx Proximity Switch	

