


# PRODUCT MANUAL

FLUSH-MOUNT 4 MM PIEZOELECTRIC  
CAVITY PRESSURE SENSOR

**6157**

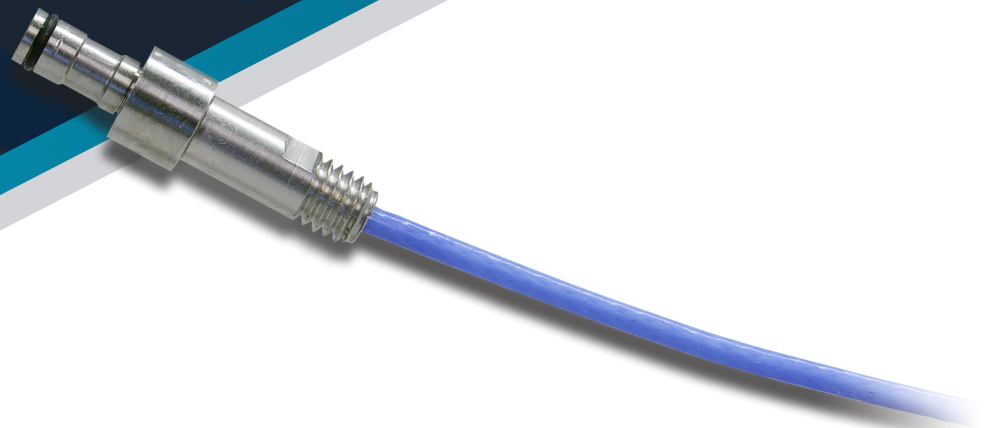



# PRODUCT MANUAL

## FLUSH-MOUNT 4 MM PIEZOELECTRIC CAVITY PRESSURE SENSOR

### 6157

#### INTRODUCTION

DISCLAIMER	V
PRIVACY	V
ALERTS	V
ABBREVIATIONS	V

#### PRODUCT DESCRIPTION

APPLICATIONS	1
FLUSH-MOUNT CAVITY PRESSURE SENSORS	1
SINGLE-CHANNEL	1
MULTI-CHANNEL	1
OPERATION	1
PIEZOELECTRIC SENSORS	1
DIMENSIONS	2
COMPATIBLE CABLES	2
CABLE LENGTHS	2

#### INSTALLATION

INSTALLATION OVERVIEW	3
RETAINING NUT INSTALLATION	3
RETAINING SLEEVE INSTALLATION	3
INSTALLATION SPECIFICATIONS—RETAINING NUT	4
PLATE THICKNESS	5
SENSOR TIP POCKET	5
SENSOR BODY POCKET	5
RETAINING NUT POCKET	5

# PRODUCT MANUAL

## FLUSH-MOUNT 4 MM PIEZOELECTRIC CAVITY PRESSURE SENSOR

### 6157

#### INSTALLATION (CONTINUED)

INSTALLATION SPECIFICATIONS—RETAINING SLEEVE	6
PLATE THICKNESS FOR CABLE CLEARANCE	7
SENSOR TIP POCKET	7
SENSOR BODY AND RETAINING SLEEVE POCKET	7
SENSOR CABLE INSTALLATION	8
CABLE CHANNEL	8
EXCESS CABLE POCKET	8
SENSOR CABLE BEND	8
SENSOR TIP MACHINING	9
OVERVIEW	9
DRY GRIND SPECIFICATIONS	9
CONTOURING SPECIFICATIONS	9
ANGLE SPECIFICATIONS	9
ADDITIONAL MACHINING	10
FLUSH MOUNT SENSOR KEYING	10
SENSOR KEYING A NEW INSTALLATION	10
SENSOR KEYING A PREVIOUS POCKET	10
SENSOR REMOVAL	11

# PRODUCT MANUAL

## FLUSH-MOUNT 4 MM PIEZOELECTRIC CAVITY PRESSURE SENSOR

### 6157

#### MAINTENANCE

CLEANING & DRIFT	13
REGULAR CLEANING	13
DRIFT	13
TESTING & CALIBRATION	13
SENSOR TESTING	13
WARRANTY	14
RJG, INC. STANDARD THREE-YEAR WARRANTY	14
PRODUCT DISCLAIMER	14

#### TROUBLESHOOTING

COMMON ERRORS	15
SENSOR HEAD ISSUES	15
CABLE ISSUES	15
SENSOR DRIFT	16
SLOW SENSOR DRIFT READING	17
FAST SENSOR DRIFT/INVALID READING	18
SENSOR DOES NOT COMMUNICATE WITH EDART	19
CUSTOMER SUPPORT	20

# PRODUCT MANUAL

## FLUSH-MOUNT 4 MM PIEZOELECTRIC CAVITY PRESSURE SENSOR

### 6157

#### RELATED PRODUCTS

COMPATIBLE PRODUCTS	21
LYNX PREMIUM CABLES CE-LX5-W	21
SINGLE-CHANNEL PIEZOELECTRIC SENSOR CABLE 1645	21
MULTI-CHANNEL PIEZOELECTRIC SENSOR CABLE C-PZ/1645	21
SIMILAR PRODUCTS	22
FLUSH MOUNT 2.5 MM PIEZOELECTRIC CAVITY PRESSURE SENSOR 6159	22
SINGLE/MULTI-CHANNEL 3.5 MM PIEZOELECTRIC SENSOR 9210	22
SINGLE/MULTI-CHANNEL 6 MM PIEZOELECTRIC SENSOR 9211	22

## INTRODUCTION

Read, understand, and comply with all following instructions. This guide must be kept available for reference at all times.

### DISCLAIMER




Inasmuch as RJG, Inc. has no control over the use to which others may put this material, it does not guarantee that the same results as those described herein will be obtained. Nor does RJG, Inc. guarantee the effectiveness or safety of any possible or suggested design for articles of manufacture as illustrated herein by any photographs, technical drawings, and the like. Each user of the material or design or both should make his own tests to determine the suitability of the material or any material for the design as well as the suitability of the material, process, and/or design for his own particular use. Statements concerning possible or suggested uses of the material or designs described herein are not to be construed as constituting a license under any RJG, Inc. patent covering such use or as recommendations for use of such material or designs in the infringement of any patent.

### PRIVACY

Designed and developed by RJG, Inc. Manual design, format and structure copyright 2021 RJG, Inc. content documentation copyright 2021 RJG, Inc. All rights reserved. Material contained herein may not be copied by hand, mechanical, or electronic means, either whole or in part, without the express written consent of RJG, Inc. Permission will normally be granted for use in conjunction with inter-company use not in conflict with RJG's best interests.

### ALERTS

The following three alert types are used as needed to further clarify or highlight information presented in the manual:

-  **DEFINITION** *A definition or clarification of a term or terms used in the text.*
-  **NOTES** *A note provides additional information about a discussion topic.*
-  **CAUTION** *A caution is used to make the operator aware of conditions that can cause damage to equipment and/or injury to personnel.*

### ABBREVIATIONS

DIA	diameter
MIN	minimum
MAX	maximum
R.	radius



## PRODUCT DESCRIPTION

The flush-mount 4 mm piezoelectric cavity pressure sensor 6157 from RJG, Inc. is a single- or multi-channel sensor that can withstand forces of up to 29,008 psi (2,000 bar) and maximum temperature of 392 °F (200 °C).

### APPLICATIONS

#### FLUSH-MOUNT CAVITY PRESSURE SENSORS

The flush-mount sensor is made of stainless steel which can be contoured, angled, and/or textured to match the cavity in which it is installed.

#### SINGLE-CHANNEL

The 6157 can be utilized in single-channel applications in conjunction with the Lynx™ mold-mount piezoelectric sensor adapter LP/LX1-M or the Lynx surface-mount piezoelectric sensor adapter PZ/LX1-S and the eDART® or CoPilot® systems.

#### MULTI-CHANNEL

The 6157 can be utilized in multi-channel applications which enable either four or eight sensors to be connected outside the mold with a single cable. The Lynx four-channel piezoelectric sensor connector and adapter—PZ-4 and PZ/LX4F-S-ID—allow up to four sensor connections, while the lynx eight-channel piezoelectric sensor connector and adapter—PZ-8 and PZ/LX8F-S-ID—allow up to eight sensor connections to the eDART or CoPilot systems.


### OPERATION

#### PIEZOELECTRIC SENSORS


Piezoelectric sensors use quartz crystals to measure the deformation, or change in resistance of the force over the sensor. The measurement is carried through the sensor cable to a sensor adapter mounted on the outside of the mold.

The sensor adapter is connected to the RJG, Inc. eDART or CoPilot system, which record and display the sensor's measurements for operator aid in process monitoring and control.

## DIMENSIONS

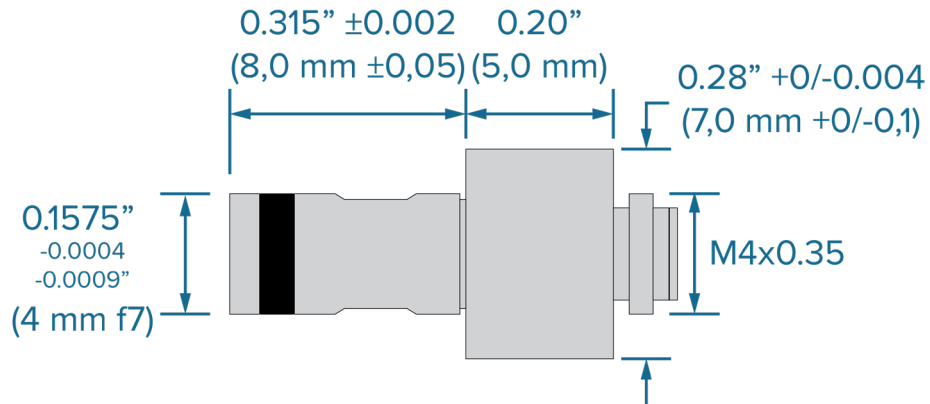

## COMPATIBLE CABLES

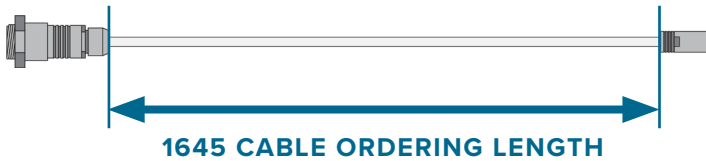

## CABLE LENGTHS

Length must be longer than needed to facilitate safe installation and removal of connector from tool to prevent tension on the lead wire; generally, 2–3" (50–75 mm) of slack is sufficient. Use good sense to determine the appropriate cable length required for each application.

SINGLE-CHANNEL	MULTI-CHANNEL	S.I.	LENGTH ENGLISH
-	C-PZ/1645-0.1	0,1 m	3.9"
-	C-PZ/1645-0.15	0,15 m	5.9"
1645-0.2	C-PZ/1645-0.2	0,2 m	7.90"
-	C-PZ/1645-0.25	0,25 m	9.8"
-	C-PZ/1645-0.3	0,3 m	11.8"
-	C-PZ/1645-0.35	0,35 m	13.8"
1645-0.4	C-PZ/1645-0.4	0,4 m	15.75"
1645-0.6	C-PZ/1645-0.6	0,6 m	23.6"
1645-0.8	C-PZ/1645-0.8	0,8 m	31.5"
1645-1.2	C-PZ/1645-1.2	1,2 m	47.24"
1645-1.6	C-PZ/1645-1.6	1,6 m	63"
1645-2.0	C-PZ/1645-2.0	2,0 m	78.74"


## INSTALLATION

The 6157 is retained in a cavity by either a nut or sleeve, manufactured by the customer (specifications provided by RJG—refer to installation guide; *nut and sleeve not sold by RJG*).

### INSTALLATION OVERVIEW


#### RETAINING NUT INSTALLATION

The sensor is inserted into and retained in the mold by a retaining nut. The retaining nut is threaded into the mold. The sensor tip reaches through to the mold cavity surface. The tip may be machined to match the cavity's surface and/or contour prior to installation.

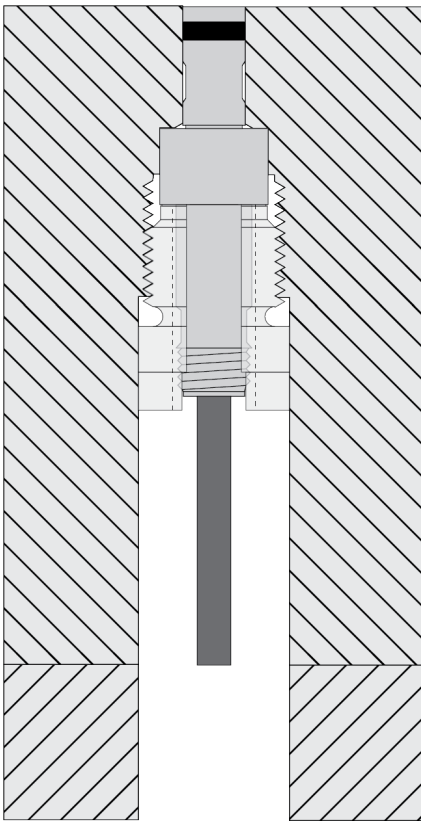


#### RETAINING SLEEVE INSTALLATION

The sensor is retained in the mold by a retaining sleeve. The retaining sleeve is fixed in the mold by a backing plate. The sensor tip reaches through to the mold cavity surface. The tip may be machined to match the cavity's surface and/or contour prior to installation.

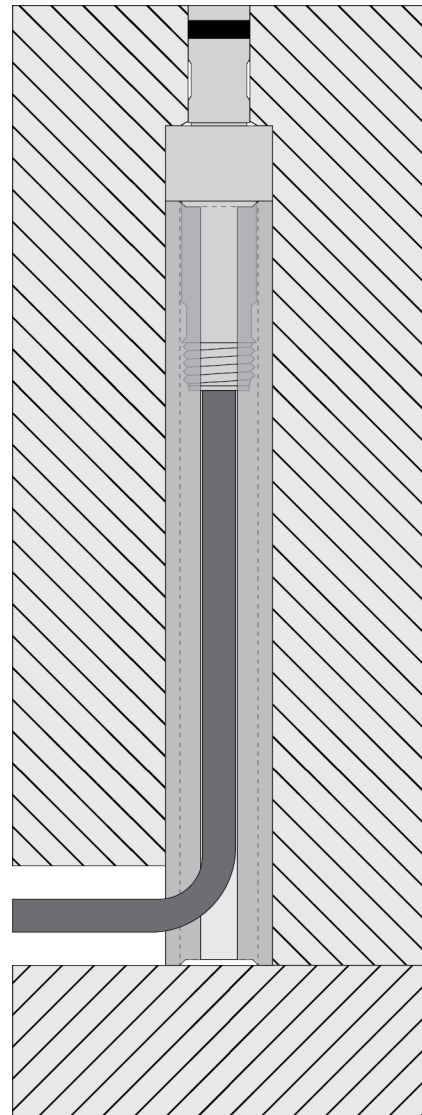

INSTALLATION SPECIFICATIONS—RETAINING NUT

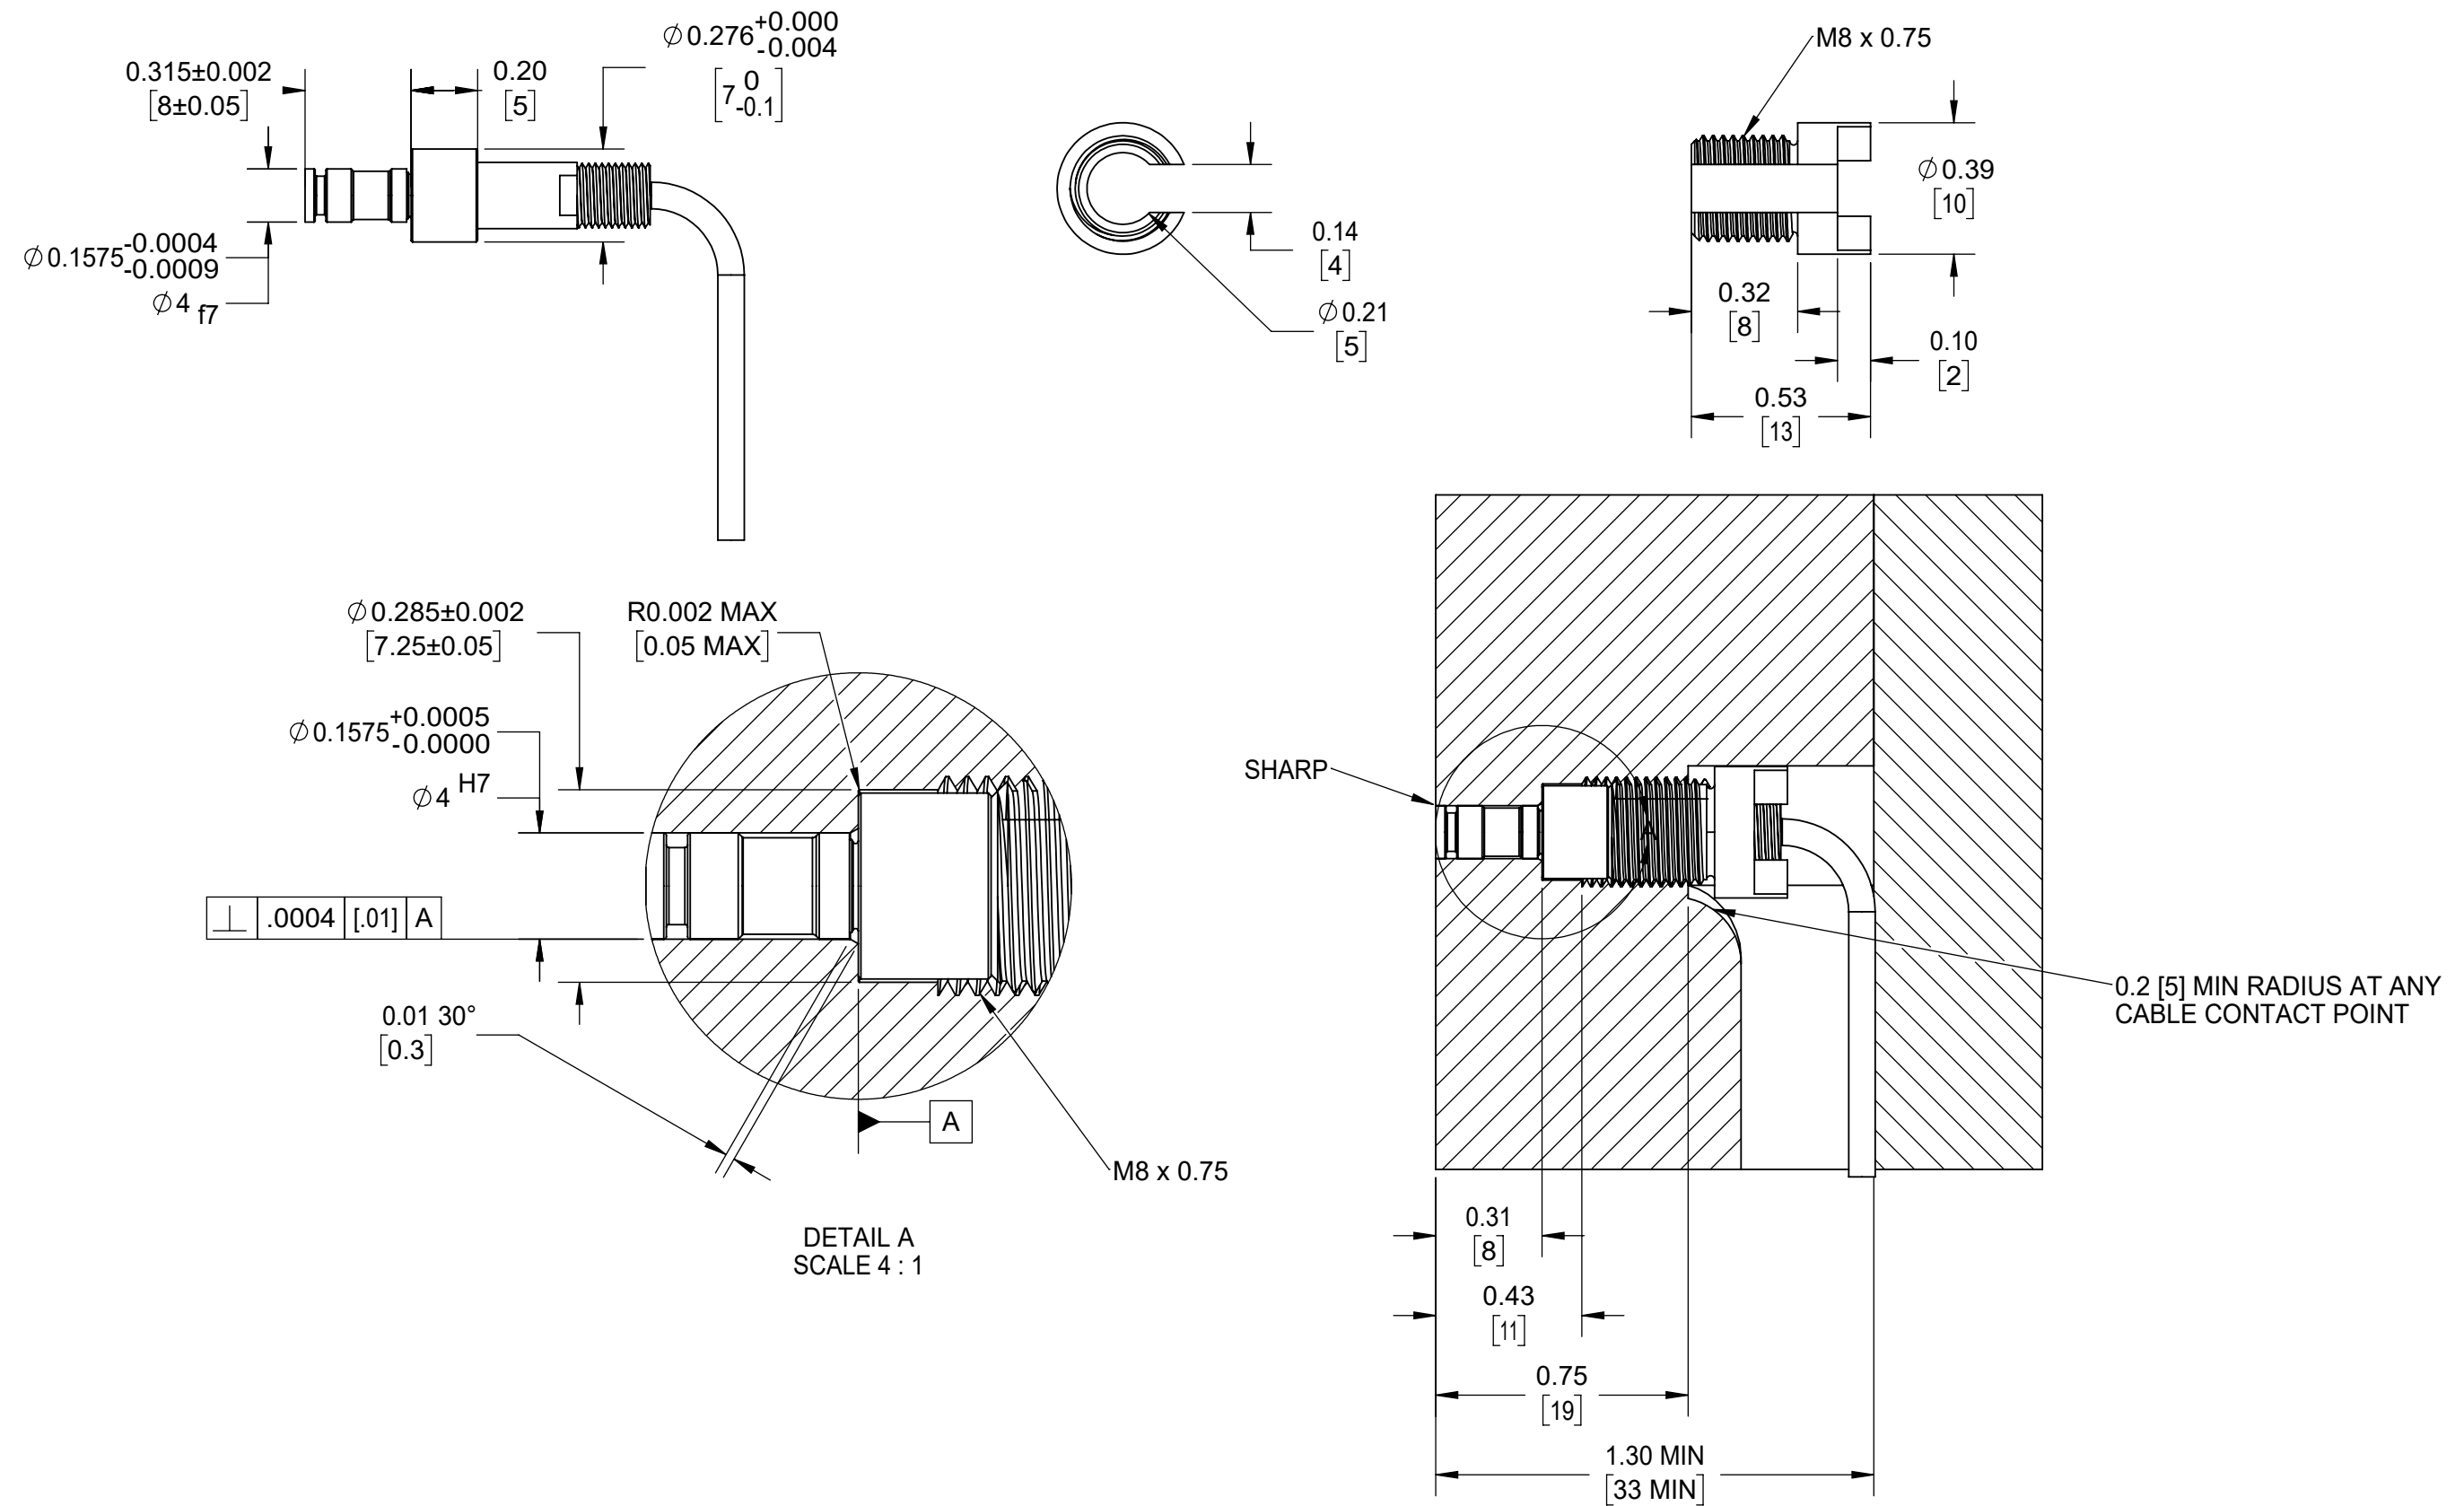

## INSTALLATION SPECIFICATIONS—RETAINING NUT (continued)

### PLATE THICKNESS

Plate thickness 1.10" (28,0 mm [**1** at right])  
MIN.

### SENSOR TIP POCKET

Machine a pocket for the sensor tip with hole basis ISO standard fit H7h6—H7h6 is a locational clearance suitable for precision location fits. The sensor should fit without binding. The sensor tip should have a surface finish of  $\sqrt{32}$  or better.

- Sensor tip diameter  $\varnothing 0.1575" +0.0005/-0.0$  (4 mm H7 [**2** at right]).
- Sensor tip length of 0.31" (8,0 mm [**3** at right]).

### SENSOR BODY POCKET


Machine a pocket for the sensor body with hole basis H7h6. The sensor body should fit without binding.

- Sensor body pocket  $\varnothing 0.285" \pm 0.002$  (7,25 mm  $\pm 0,05$  [**4** at right]).
- Chamfer 60° MIN/MAX 0.01/0.02" (0,3/0,4 mm [**5** at right]) where sensor tip and sensor body meet for ease of installation.

### RETAINING NUT POCKET


Drill and tap a pocket for the retaining nut.

- To sensor retaining nut pocket  $\varnothing 0.39"$  MIN (10,0 mm [**6** at right]).
- Sensor retaining nut pocket M8 x 0.75 (**7** at right).


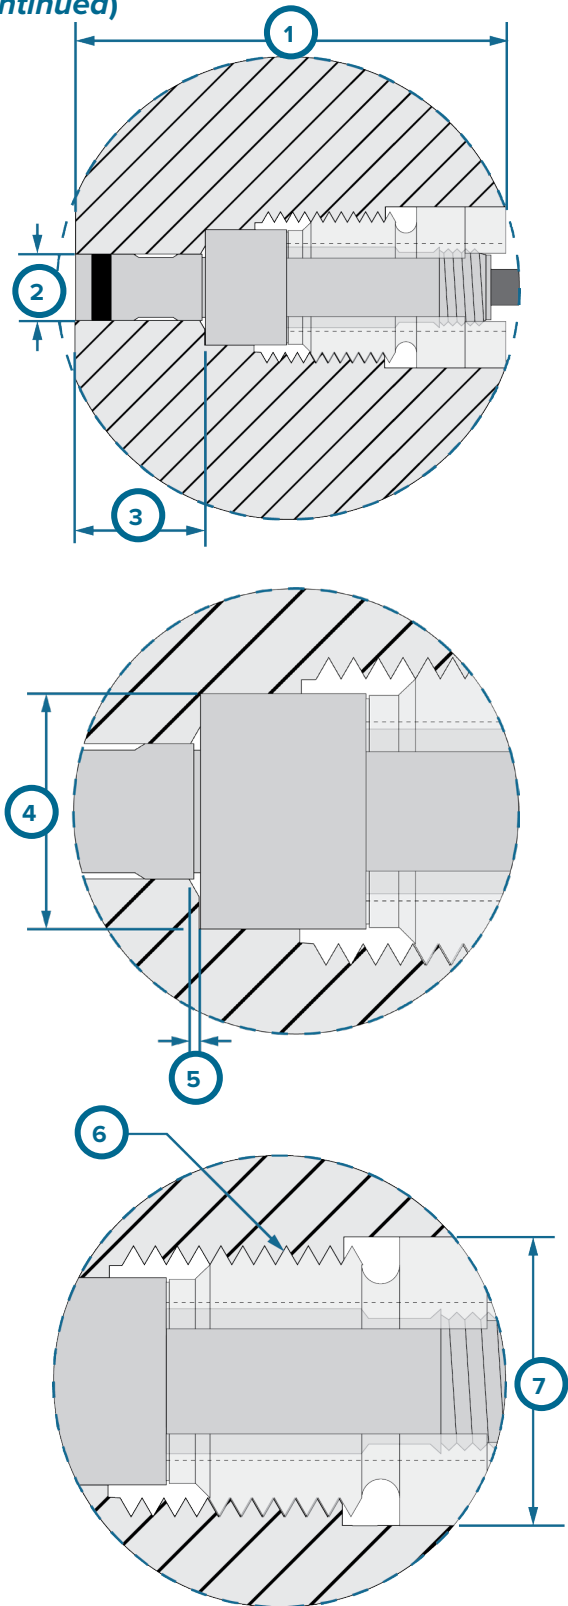


<b>1</b> 1.1" (28,0 mm) MIN	<b>5</b> Chamfer 60° 0.01/0.02" (0,3/0,4 mm) MIN/MAX
<b>2</b> $\varnothing 0.1575" +0.0005/-0.0$ (4 mm H7) DIA	<b>6</b> $\varnothing 0.39"$ (10,0 mm) MIN
<b>3</b> 0.31" (8,0 mm)	<b>7</b> M8 x 0.75
<b>4</b> $\varnothing 0.285" \pm 0.002$ (7,25 mm $\pm 0,05$ )	

**INSTALLATION SPECIFICATIONS—RETAINING SLEEVE**

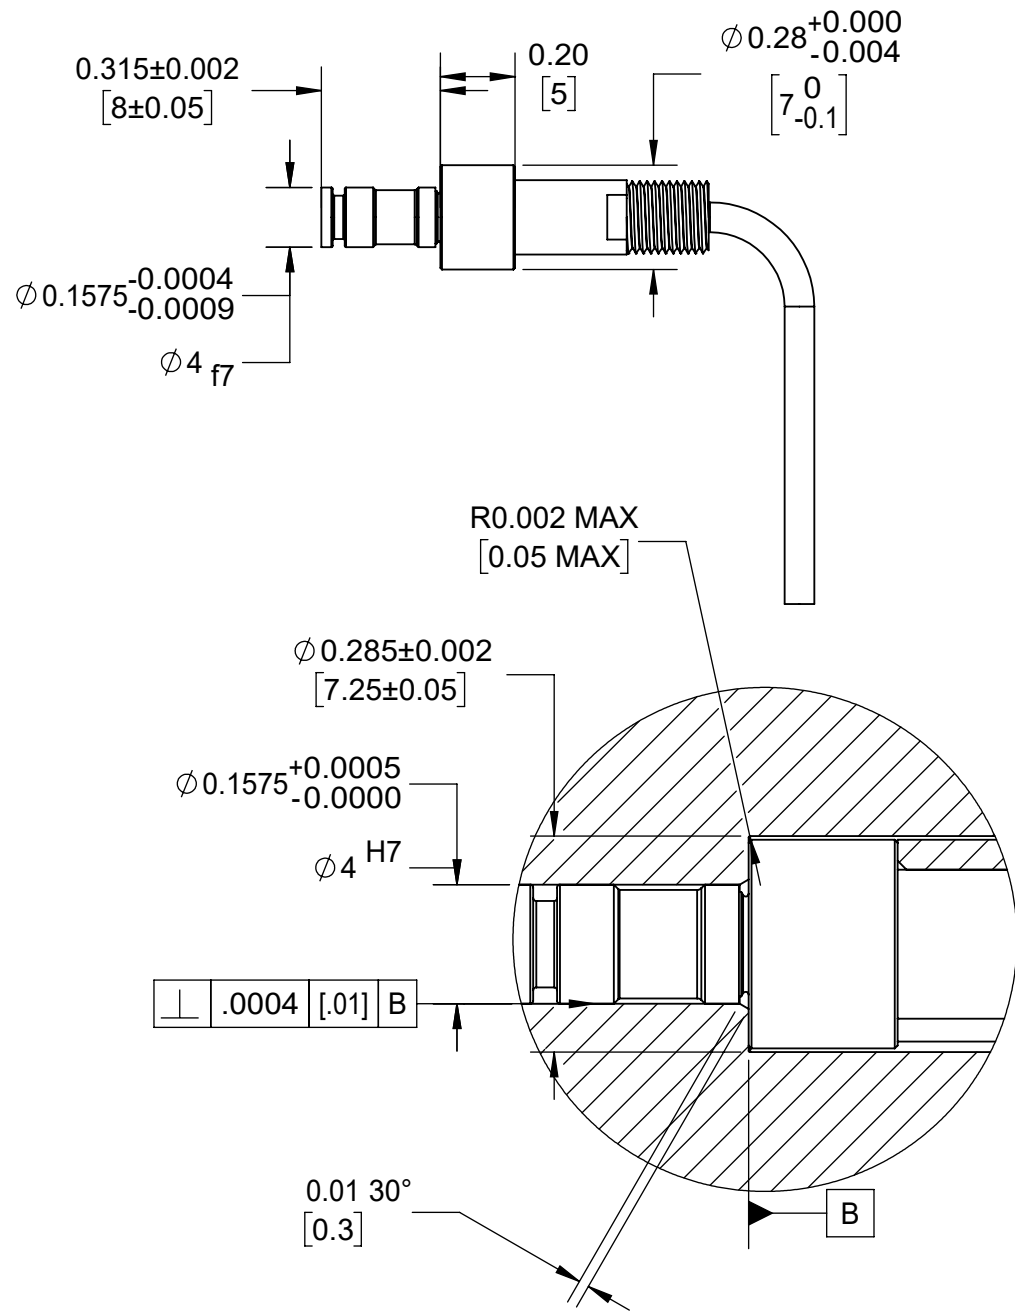

DETAIL B  
SCALE 4 : 1

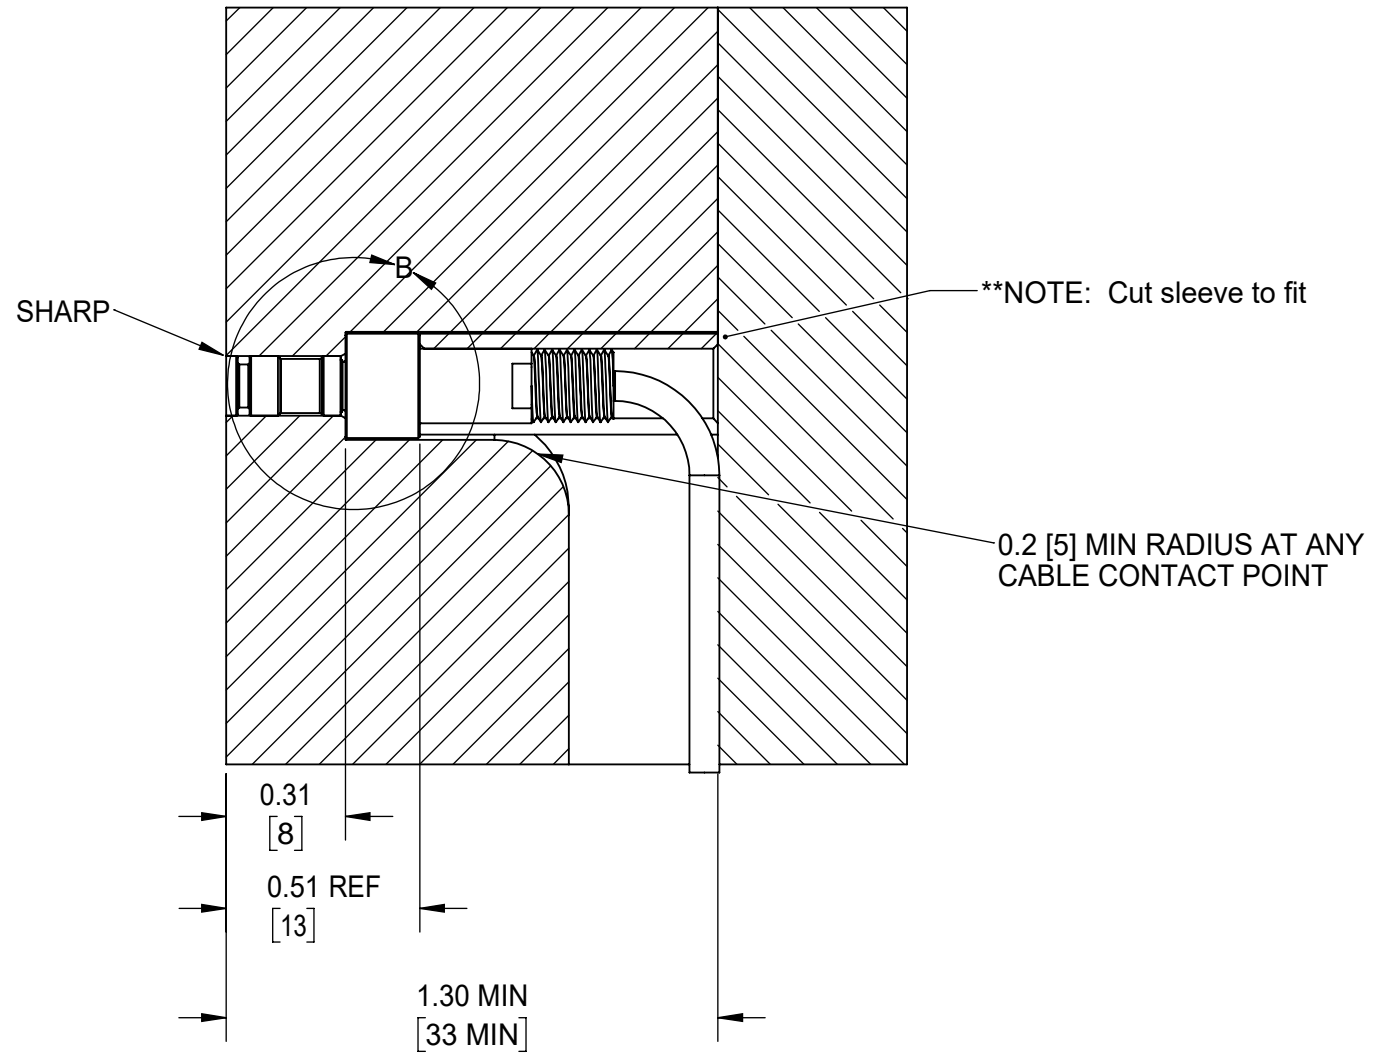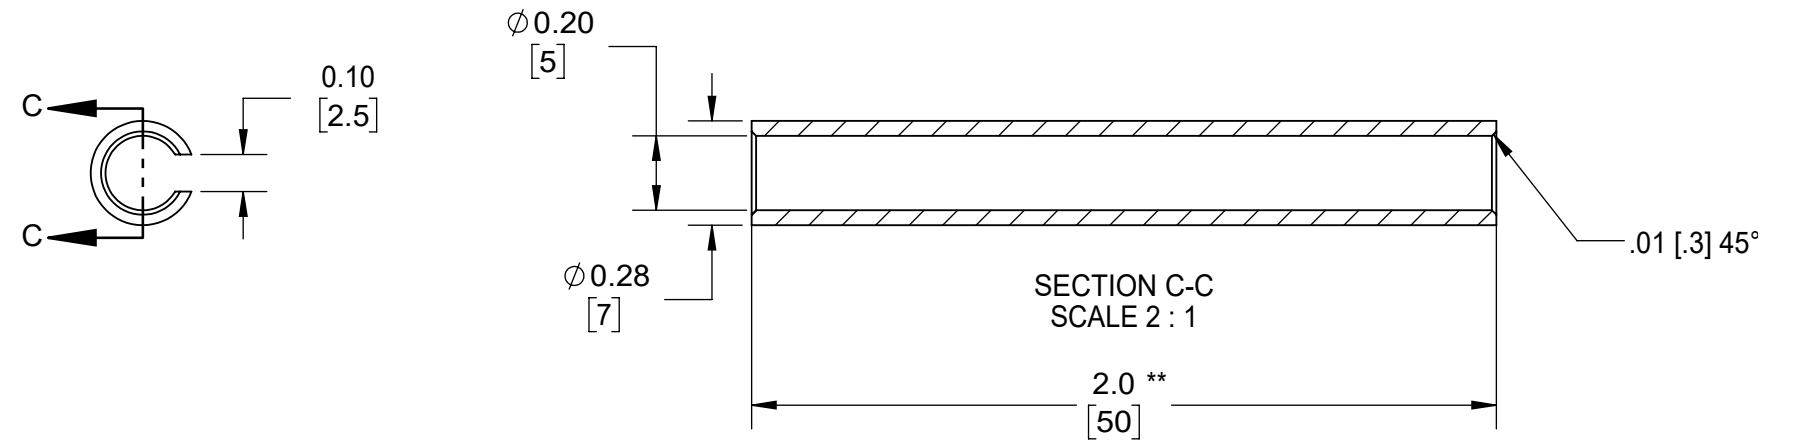

## INSTALLATION SPECIFICATIONS—RETAINING SLEEVE *(continued)*


### PLATE THICKNESS FOR CABLE CLEARANCE

Plate thickness 1.57" (40,0 mm [**1** at right])  
MIN for cable clearance.

### SENSOR TIP POCKET

Machine a pocket for the sensor tip with hole basis ISO standard fit H7h6—H7h6 is a locational clearance suitable for precision location fits. The sensor should fit without binding. The sensor tip should have a surface finish of  $\sqrt{32}$  or better.


- Sensor tip diameter  $\varnothing$  0.1575" +0.0005/-0.0 (4 mm H7 [**2** at right]).
- Sensor tip length of 0.31" (8,0 mm [**3** at right]).

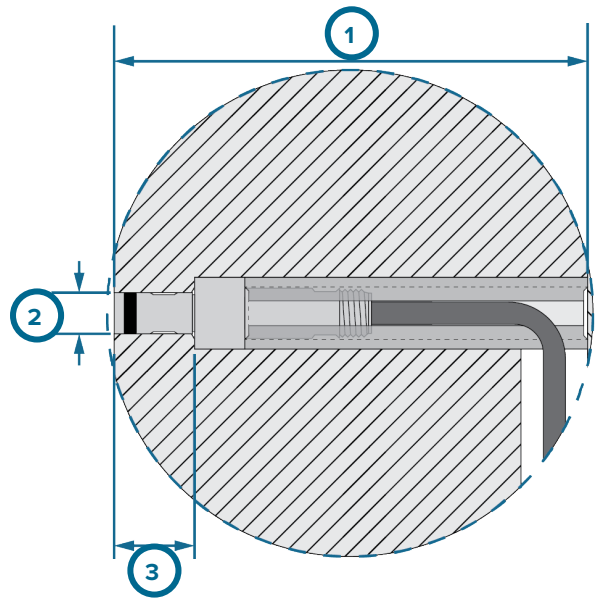

### SENSOR BODY AND RETAINING SLEEVE POCKET

Machine a pocket for the sensor body and retaining sleeve with hole basis H7h6. The sleeve should fit without binding.

- Sensor body and retaining sleeve pocket  $\varnothing$  0.285"  $\pm$ 0.002 (7,25 mm  $\pm$ 0,05 [**4** at right]).
- Chamfer 60° MIN/MAX 0.01/0.02" (0,3/0,4 mm [**5** at right]) where sensor tip and sensor body meet for ease of installation.

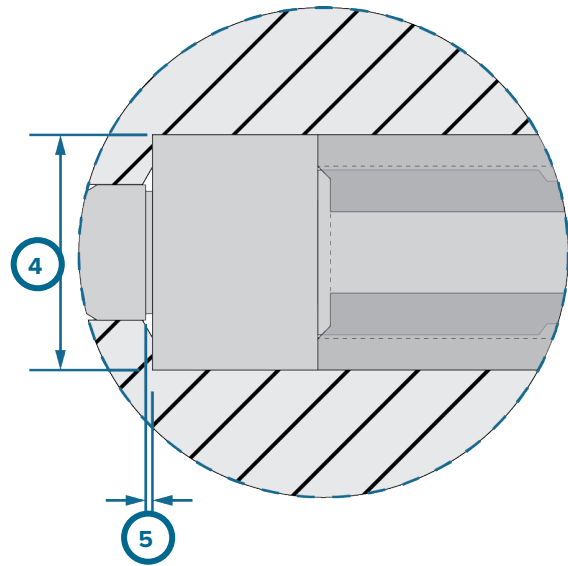

<b>1</b>	1.57" (40,0 mm) MIN
<b>2</b>	$\varnothing$ 0.1575" +0.0005/-0.0 (4 mm H7) DIA
<b>3</b>	0.31" (8,0 mm)
<b>4</b>	0.285" $\pm$ 0.002 (7,25 mm $\pm$ 0,05)
<b>5</b>	Chamfer 60° 0.01/0.02" (0,3/0,4 mm) MIN/MAX

## SENSOR CABLE INSTALLATION

### CABLE CHANNEL

Mill cable channel of 0.25 x 0.25" (6 x 6 mm



[**1** at right]) to mold surface. Break all corners to avoid cable damage.

### EXCESS CABLE POCKET

If necessary, a cable pocket 1.00" (25,4 mm [**2** at right]) may be machined to store excess cable.

### SENSOR CABLE BEND

The sensor cable internal turn radius for the cable to coil is 0.197" (5 mm) MIN.

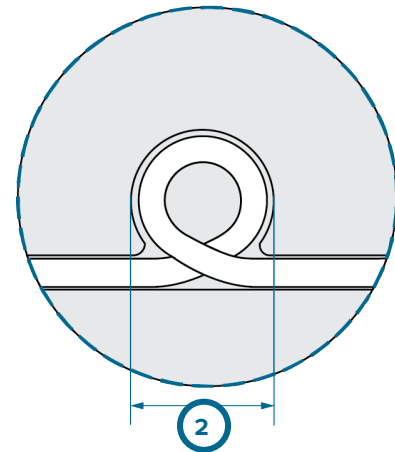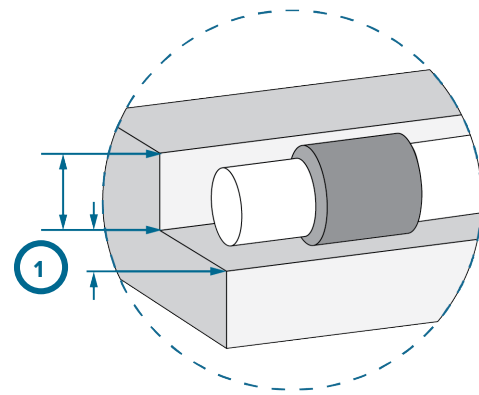

**1** 0.25 x 0.25" (6 x 6 mm)

**2** 1.00" (25,4 mm)

## SENSOR TIP MACHINING

### OVERVIEW

Only grind the sensor if necessary to accurately fit the surface of the cavity; once a flush mount sensor tip has been modified it cannot be re-calibrated. Read and follow all instructions, and refer to the provided figures to properly machine flush mount sensors.

### DRY GRIND SPECIFICATIONS

Dry-grind the sensor head no more than 0.0005" (0,013 mm) per pass. Do not submerge the sensor head in fluids. Sensors are not water tight; keep all connectors clean and dry.

### CONTOURING SPECIFICATIONS



The sensor tip may be ground (dry) into a contour in order to match the cavity surface. Do not dry grind the sensor head more than 0.0005" (0,013 mm) per pass. The sensor head may be contoured up to 0.016" (0,4 mm (1 at right)) from the top .

### ANGLE SPECIFICATIONS

The sensor tip may be ground (dry) into an angle in order to match the cavity surface. Do not dry -grind the sensor head more than 0.0005" (0,013 mm) per pass. The sensor head may be ground to an angle of no more than 5°, and no more than 0.016" (0,4 mm (2 at right)).

### MACHINING SPECIFICATIONS

Dry Grind (per pass)	0,013 mm	0.0005"
Contour	0,4 mm	0.016"
Angle 5°	0,4 mm	0.016"

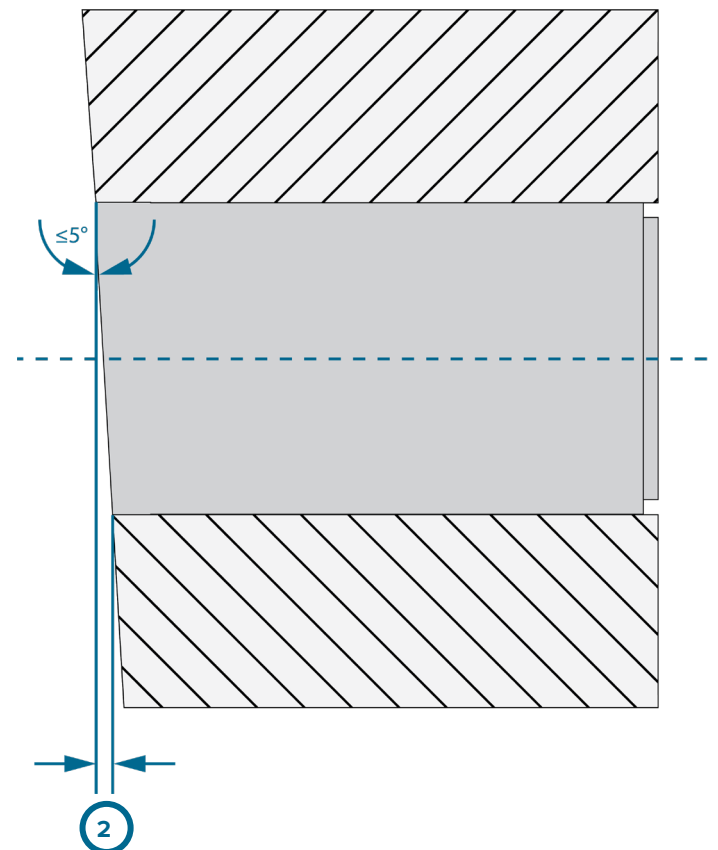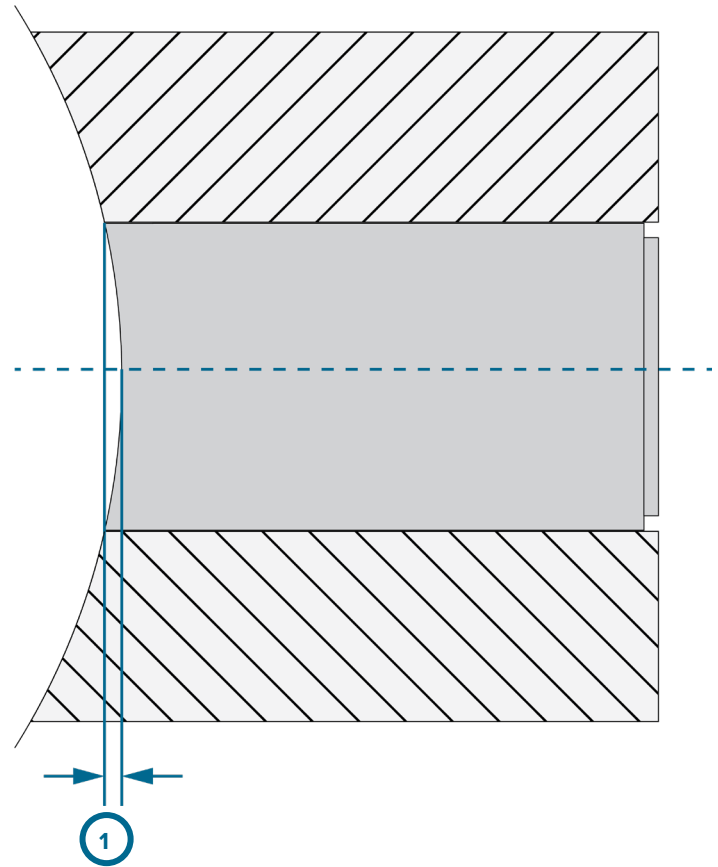

## ADDITIONAL MACHINING

Once a sensor is contoured or angled it can be installed into the tool in the proper orientation. Sensor alterations are not typically symmetrical, and ensuring that the sensor is correctly installed in the tool and that it remains in the proper orientation is critical.

## FLUSH MOUNT SENSOR KEYING

Keying of a sensor can prevent the unwanted rotation of installed sensors. Read and follow all instructions to key a sensor—either for an previously-machined sensor pocket, or a new installation.

### SENSOR KEYING A NEW INSTALLATION

A new sensor installation can be keyed by grinding down a flat onto one side of the sensor and using a mill to machine the sensor pocket to match. When the sensor is installed in the sensor pocket, the contact of the flat, or keyed, surfaces will prevent sensor rotation (refer to figure at bottom left).

### MACHINING SPECIFICATIONS

Dry Grind (per pass)	0,013 mm	0.0005"
Sensor Slot	0,3 mm	0.01"
Sensor Pocket Slot	0,3 mm	0.01"


### SENSOR KEYING A PREVIOUS POCKET

When a sensor pocket has previously been machined into a tool, a sensor can be keyed using a ball-nose end mill to create a slot on the sensor body, and a slot in the sensor pocket. A dowel is installed into the sensor and tool void created during milling to prevent sensor rotation (refer to figure at bottom left).


### MACHINING SPECIFICATIONS

Milling (per pass)	0,013 mm	0.0005"
Sensor Slot	0,5 mm	0.02"
Sensor Pocket Slot	0,5 mm	0.02"

## SENSOR KEYING—NEW INSTALLATION

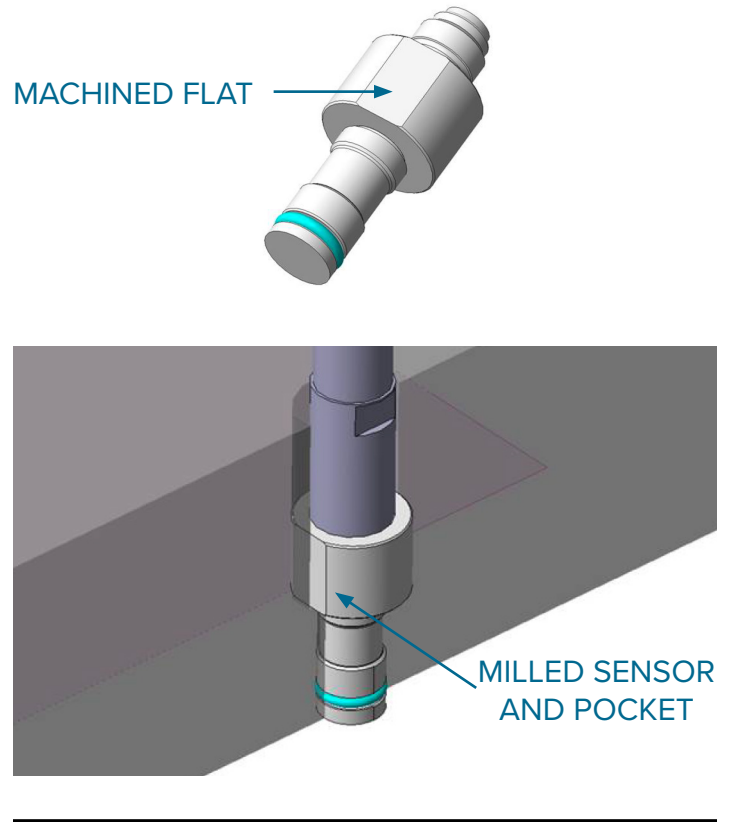


## SENSOR KEYING—PREVIOUS POCKET

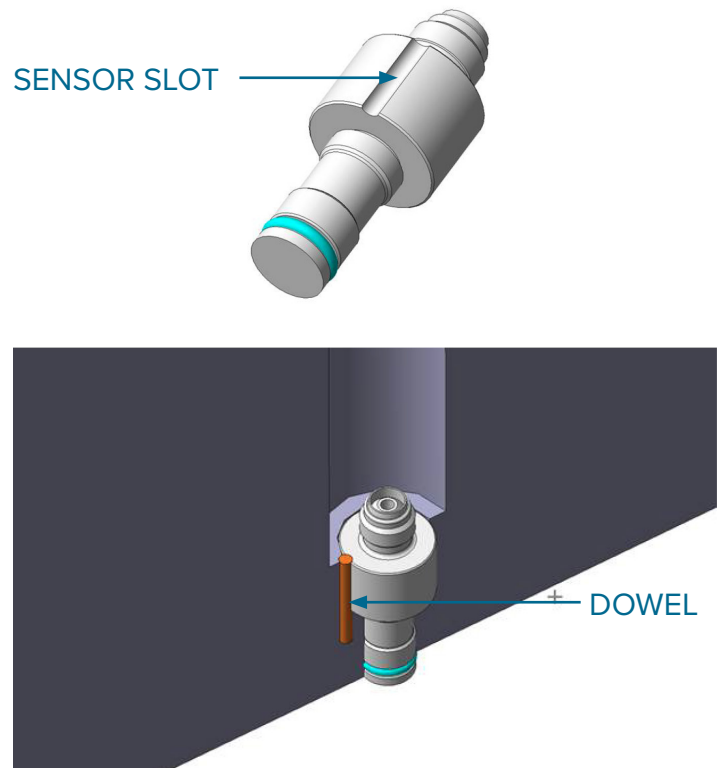

## SENSOR REMOVAL


### CAUTION

*DO NOT pull on the sensor cable to remove sensor from the mold. Failure to comply will result in damage or destruction to sensor head, sensor cable, and/or mold. RJG is not responsible for improperly installed or removed sensors, sensor cables, or molds.*

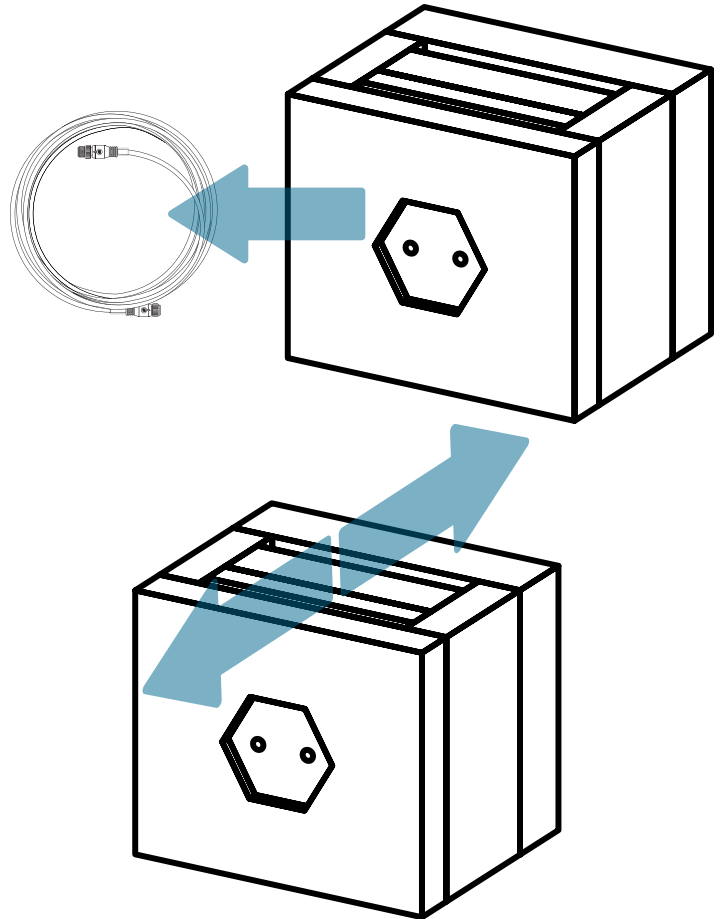


1. Disconnect sensor, sensor adapter cables, and other cables, and label them for future reference.

2. Depending on the particular mold and setup, disassemble/remove necessary plates and components to access the cavity plate in which the sensor(s) is(are) installed.

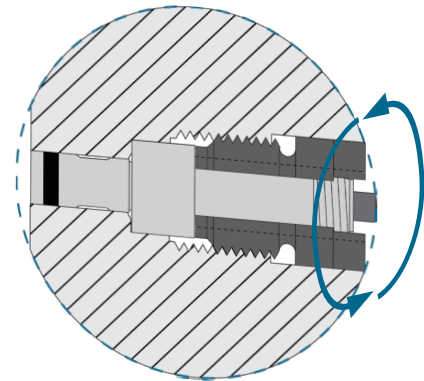


3. Depending on installation retention method, remove the retaining nut or retaining sleeve.

- Retaining Nut: Unthread the retaining nut from the mold.
- Retaining Sleeve: Unthread retaining sleeve from sensor.

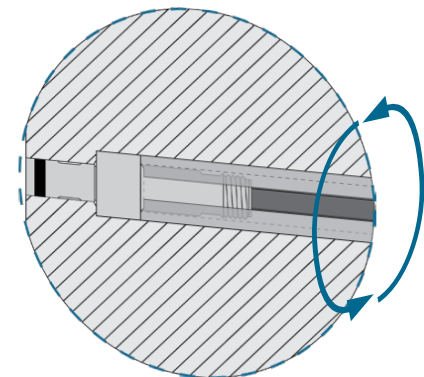


## SENSOR REMOVAL (continued)

**CAUTION** DO NOT pull on the sensor cable to remove sensor from the mold. Failure to comply will result in damage or destruction to sensor head, sensor cable, and/or mold. RJG is not responsible for improperly installed or removed sensors, sensor cables, or molds.

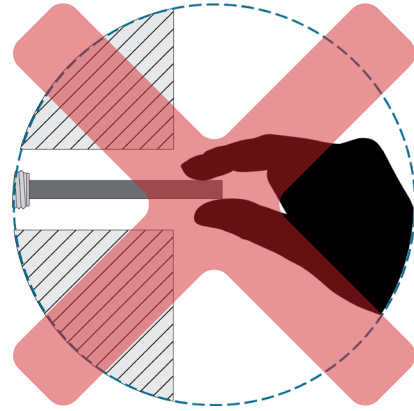


**CAUTION** Do not use a sharp implement to remove sensor to prevent the sensing face from being damaged. Failure to comply will result in damage or destruction to sensor and sensor calibration.

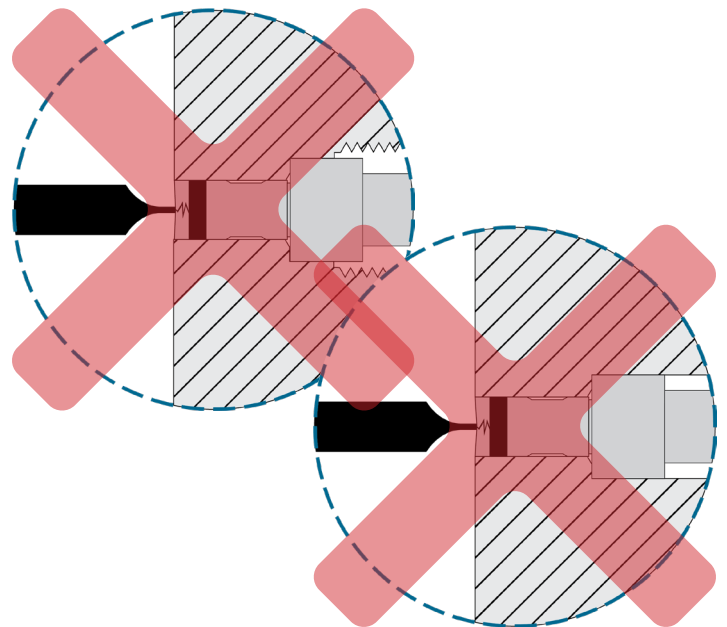

4. To remove a sensor—DO NOT PULL ON SENSOR CABLE TO REMOVE SENSOR—gently tap/push the sensor from the cavity side with a fine pin or probe to slide the sensor body back through the mold. DO NOT USE SHARP IMPLEMENT TO REMOVE SENSOR.

5. After removal, clean and inspect the sensor for damage and visible wear.

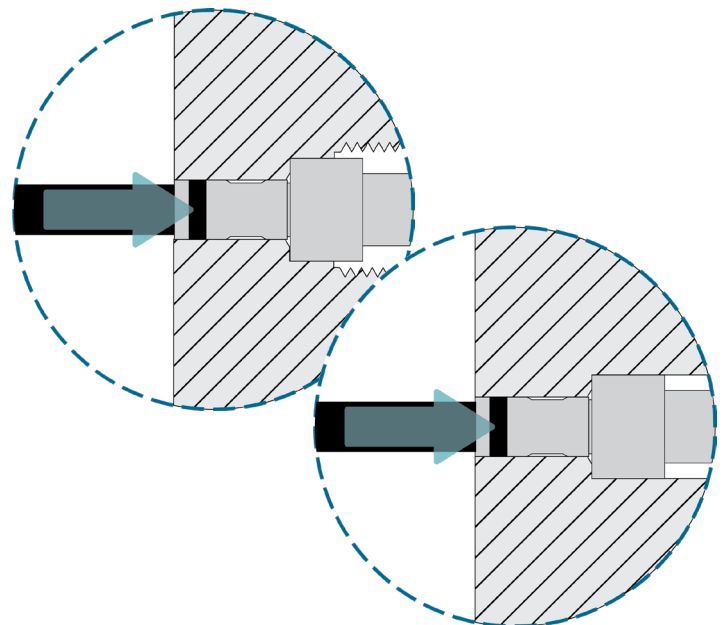

### CLEANING & DRIFT

#### REGULAR CLEANING

Pull sensors from the mold and clean out the pockets and channels when a mold is pulled for preventative maintenance. Sensors, connectors, and cables must be installed in areas free from oil, dirt, grime, and grease.

RJG, Inc. recommends the following cleaners:

- MicroCare MCC-CCC Contact Cleaner C
- MicroCare MCC-SPR SuprClean™
- Miller-Stephenson MS-730L Contact Re-Nu®

#### DRIFT

Piezoelectric sensors can drift negative (-) or positive (+). The acceptable drift specification for RJG piezoelectric sensors is 20 pC/minute. The easiest place to monitor this is the eDART “Sensor Locations” screen. Drift of  $\pm 20$  pC in sixty seconds indicates abnormal drift. The cause of “Drift” is dirty/contaminated connections. This could be any of the connections from the sensor to the eDART.

Properly clean all connection points with an electronics grade contact cleaner. Allow the sensors and cables to air-dry before reconnecting them. Do not blow them out with a “shop” air line as this air usually contains oil and other contaminants.

If drift continues, clean the sensors out again with electronics grade cleaner then bake them in an oven to remove the contaminants (same method used at RJG). It is recommended to bake the sensors/ cables at 100 °C for sixty minutes.

If continuing to experience drift after this, please contact RJG Sales for pricing and lead time on replacement items.

### TESTING & CALIBRATION

Follow all instructions and recommendations for individual sensor testing and calibration for optimal operation.

#### SENSOR TESTING

##### 6. Sensor PreCheck

The Sensor PreCheck provides diagnostics on typical sensor problems such as sensor drift, preload, and zero shift, and can also detect sensor installation errors caused by improper pocket dimensions, damaged wires, and damaged sensor heads. A test report with sensor configuration can be emailed or printed from the device. This device allows testing of up to thirty-two sensors at one time and can verify that a force was applied to the sensor.

##### 7. eDART Software—Raw Data Viewer

The eDART Raw Data Viewer displays the status of the sensor, either Valid, No Reply, Stale, or Invalid.

- A Valid sensor has raw counts that change when force is applied to the sensor; this indicates a properly working sensor.
- A No Reply sensor is not communicating with the eDART; the sensor may be unplugged.
- A Stale sensor indicates a sensor that is unused.
- An Invalid sensor will indicate a Failure of either Over-range (Ovrng) or Under-range (Undrng). The Ovrng indicates the sensor’s calibration has changed too far in a positive direction, outside of the upper specification. The Undrng indicates that the sensor’s calibration has changed too far in a negative direction, and the sensor may report a number below zero when load is applied.

## WARRANTY

### RJG, INC. STANDARD THREE-YEAR WARRANTY

RJG, Inc. is confident in the quality and robustness of the 6517 sensors, and so are offering a three-year warranty on all RJG cavity pressure sensors. RJG's cavity pressure sensors are guaranteed against defects in material and workmanship for three years from the ship date. The warranty is void if it is determined that the sensor was subjected to abuse or neglect beyond the normal wear and tear of field use, or in the event the sensor has been opened by the customer. This new warranty policy is the most generous offered in the cavity pressure sensor industry, with one year being the most common.

### PRODUCT DISCLAIMER

RJG, Inc. is not responsible for the improper installation of this equipment, or any other equipment RJG manufactures.


Proper RJG equipment installation does not interfere with original equipment safety features of the machine. Safety mechanisms on all machines should never be removed.

## TROUBLESHOOTING


### COMMON ERRORS

#### SENSOR HEAD ISSUES

Sensor head is placed under a steel shut-off (1 at right). The sensor must not be placed in a steel shut-off area; failure to comply will result in failure of sensor to produce the desired data outcomes.

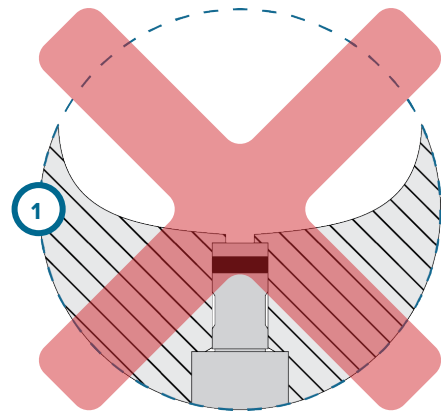


The sensor retaining nut is over-tightened, crushing the sensor (2 at right). Do not over tighten the retaining nut when installing the sensor; failure to comply will result in destruction of sensor.

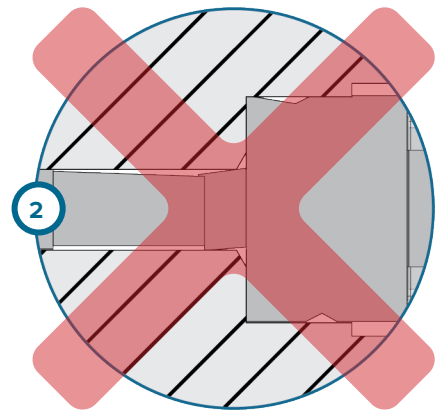

#### CABLE ISSUES

Sensor cable is pinched during mold assembly (3 at right). The sensor cable(s) must never be pinched in the mold assembly; failure to comply will result in failure of sensor to produce the desired data outcomes, and damage or destruction of cable.

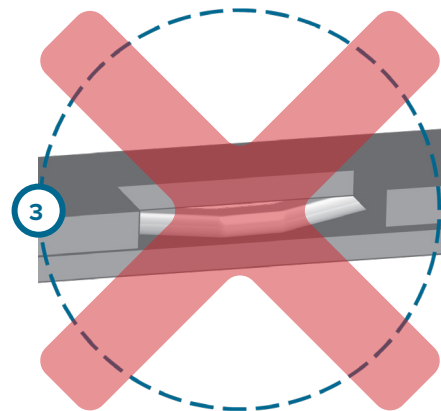

## SENSOR DRIFT

Piezoelectric sensors may experience drift if connections are dirty/contaminated, or have a sensor cable that is damaged. There are three types of drift that the sensors may produce.

### 1. Slow sensor drift reading.


A sensor reading that slowly rises or falls (positive or negative) from the set zero value.



### 2. Fast sensor drift/invalid reading.

A sensor reading that quickly or rises or falls (positive or negative) from the set zero value, possibly so much that the reading becomes invalid.

### 3. No sensor/eDART communication.

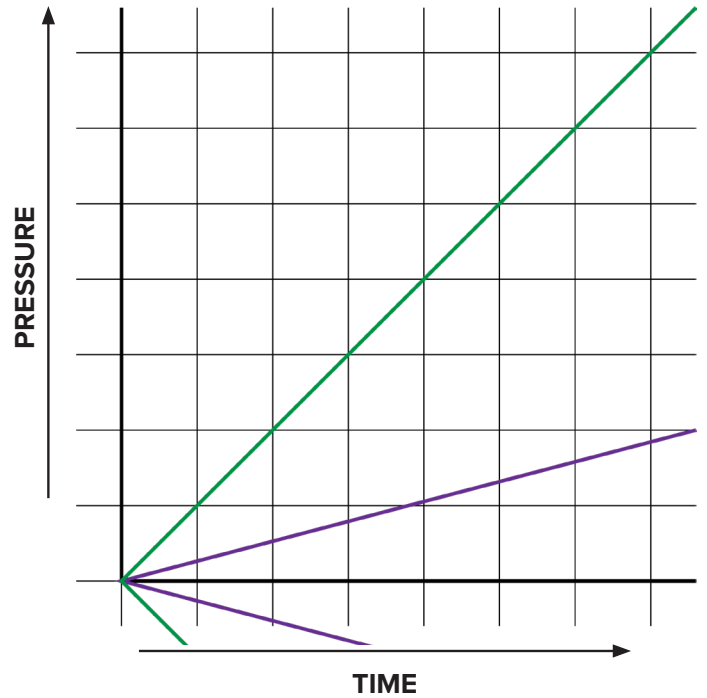The sensor reading cannot be obtained by the eDART.



Piezoelectric Sensor Drift Type Graph	
	Fast Drift/Invalid
	Slow Drift

## SENSOR DRIFT (continued)

### SLOW SENSOR DRIFT READING

If the sensor reading will not remain steady and drifts positive or negative, the sensor, cables, or adapter connectors may be contaminated. To identify the connector(s) with contamination, perform the following:


1. Disconnect sensor from 1645 or C-PZ/1645 cable and clean ends; if reading continues to drift, continue to next step.
2. Disconnect the 1645 or C-PZ/1645 from the sensor connector or adapter and clean ends; if the reading continues to drift, continue to next step.
3. If applicable, disconnect cable from the sensor connector and clean end and connector; if the reading continues to drift, continue to next step.
4. If applicable, disconnect cable from adapter and clean end and connector; if the reading continues to drift, continue to next step.

If the sensor reading continues to drift after the above troubleshooting steps are completed, either the sensor, cables, connector, or adapter must be replaced.

### SINGLE-CHANNEL



### MULTI-CHANNEL

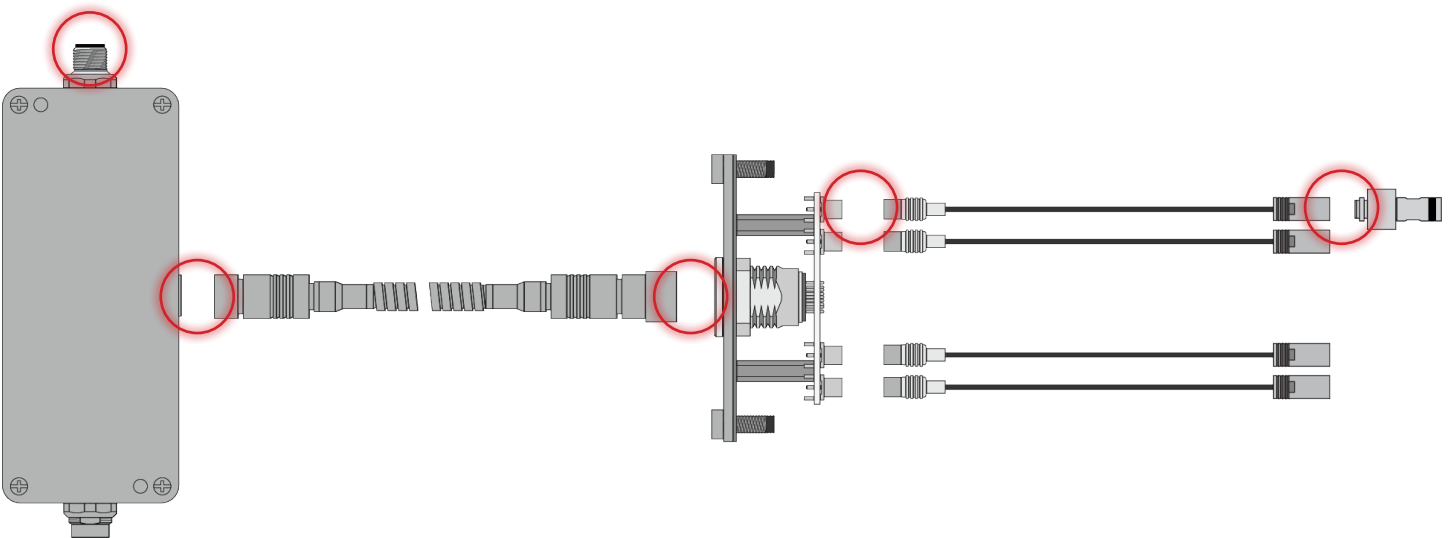

## SENSOR DRIFT (continued)

### FAST SENSOR DRIFT/INVALID READING

If the sensor reading drifts quickly and becomes invalid, the sensor, cables, or adapter connectors may be heavily contaminated, or the adapter may have failed. To identify the connector(s) with contamination, perform the following:


1. Disconnect sensor from 1645 or C-PZ/1645 cable and clean ends; if reading continues to drift, continue to next step.
2. Disconnect the 1645 or C-PZ/1645 from connector or adapter and clean ends; if the reading continues to drift, continue to next step.
3. If applicable, disconnect cable from the sensor connector and clean end and connector; if the reading continues to drift, continue to next step.
4. If applicable, disconnect cable from the adapter and clean end and connector; if the reading continues to drift, continue to next step.

If the sensor reading continues to drift or remains invalid after the above troubleshooting steps are completed the adapter must be replaced.

### SINGLE-CHANNEL



### MULTI-CHANNEL

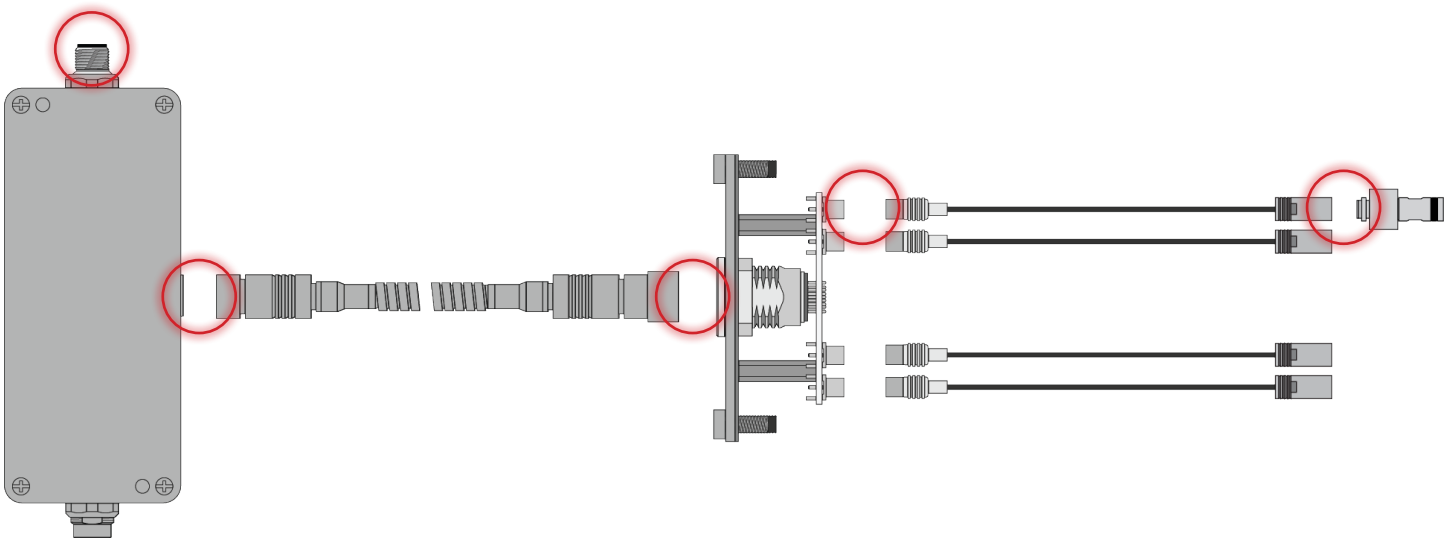

## SENSOR DRIFT (continued)

### SENSOR DOES NOT COMMUNICATE WITH EDART

If the eDART is unable to establish communication with the sensor, the cables or adapter may have failed. To identify the failed component, perform the following;


1. Replace the 1645 or C-PZ/1645 sensor cable with working cable; test sensor operation. If communication remains non-existent, continue to next step.
2. Replace the sensor connector cable with working cable; test sensor operation. If communication remains non-existent, continue to next step.
3. If applicable, replace the sensor adapter cable with working cable; test sensor operation. If communication remains non-existent, continue to next step.
4. Replace the CE-LX5-W Lynx cable with working cable; test the sensor operation.

If the eDART cannot establish communication after these steps, the connector has failed and must be replaced.

#### SINGLE-CHANNEL



#### MULTI-CHANNEL

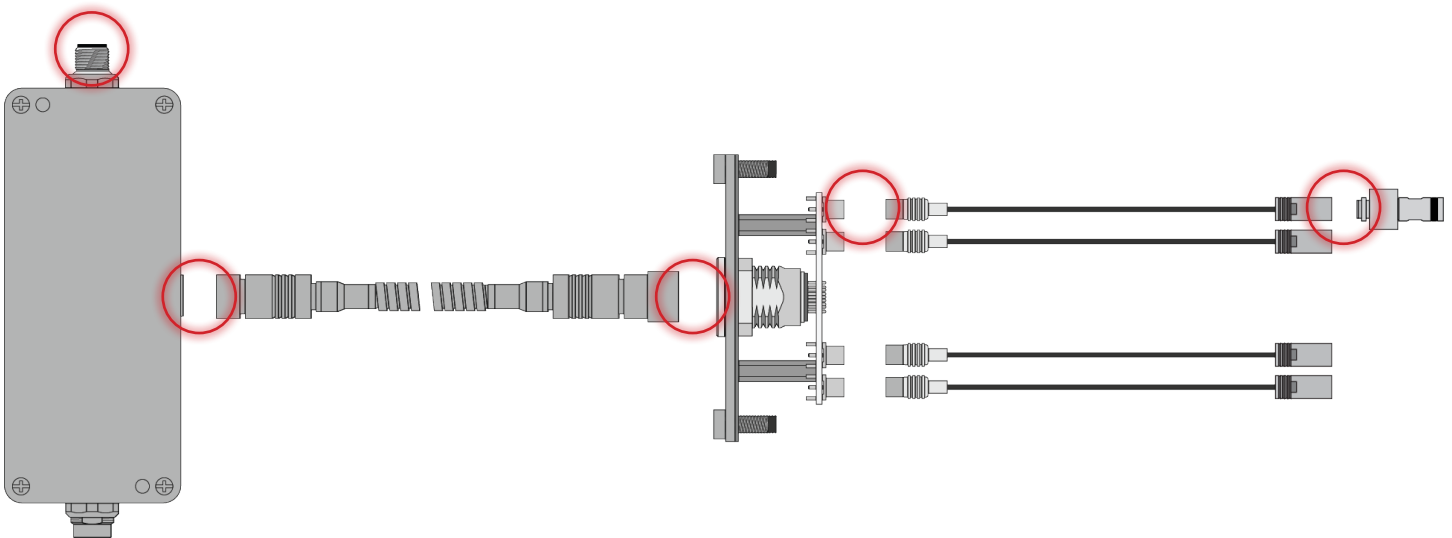

## CUSTOMER SUPPORT


Contact RJG's Customer Support team by phone or email.

RJG, Inc. Customer Support

P: 800.472.0566 (Toll Free)

P: +1.231.933.8170

[www.rjginc.com/support](http://www.rjginc.com/support)

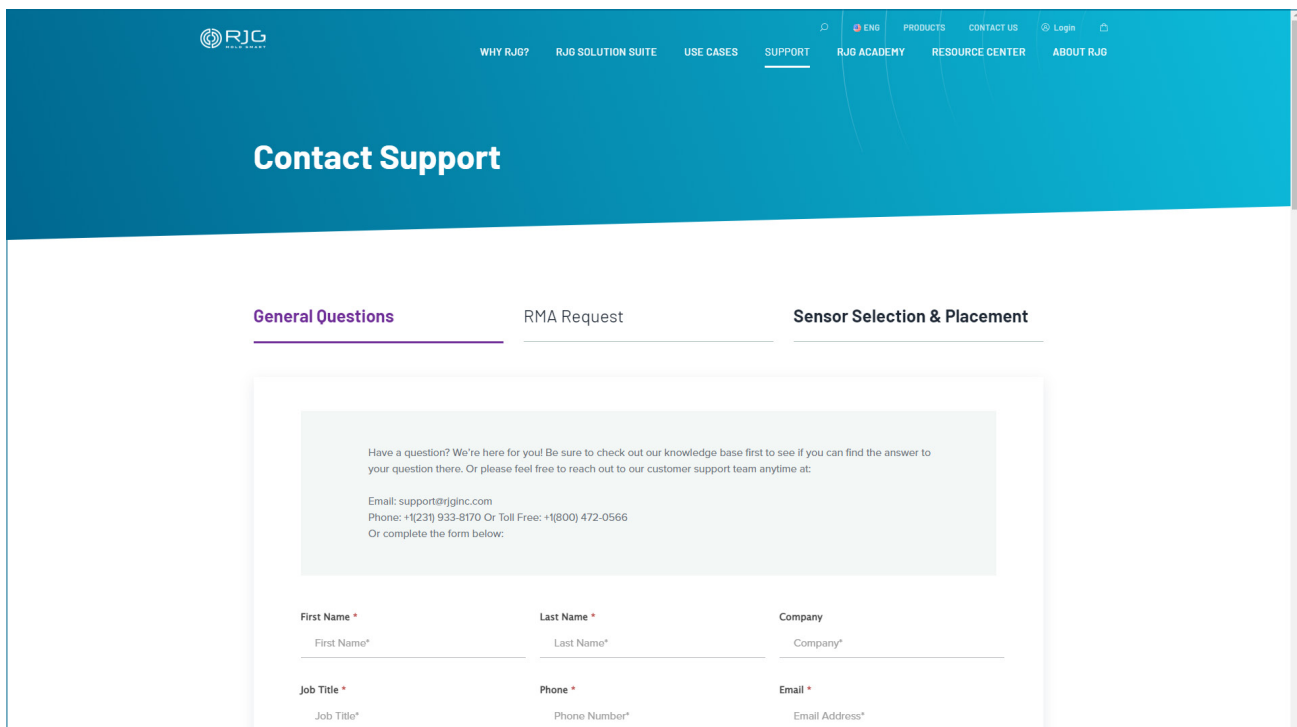

The screenshot shows the RJG Customer Support website. The header is blue with the RJG logo on the left and navigation links: WHY RJG?, RJG SOLUTION SUITE, USE CASES, SUPPORT (underlined), RJG ACADEMY, RESOURCE CENTER, and ABOUT RJG. On the right side of the header, there are links for ENG, PRODUCTS, CONTACT US, and Login. Below the header is a large blue banner with the text "Contact Support". Underneath the banner are three tabs: "General Questions" (selected), "RMA Request", and "Sensor Selection & Placement". The "General Questions" tab is active, showing a light blue box with the following text: "Have a question? We're here for you! Be sure to check out our knowledge base first to see if you can find the answer to your question there. Or please feel free to reach out to our customer support team anytime at: Email: support@rjginc.com Phone: +1(231) 933-8170 Or Toll Free: +1(800) 472-0566 Or complete the form below:". Below this text is a contact form with six fields: "First Name \*", "Last Name \*", "Company", "Job Title \*", "Phone \*", and "Email \*". Each field has a corresponding input box with a small asterisk indicating it is required.

## RELATED PRODUCTS

The 6157 is compatible with other RJG, Inc. products for use with the eDART or CoPilot process control and monitoring system.

### COMPATIBLE PRODUCTS

#### LYNX PREMIUM CABLES CE-LX5-W

The Lynx premium sensor cable (1 at right) is a polypropylene-coated cable suited for the heat and stress found in injection molding environments. The cable is available in lengths 12–472” (0,3–12 m), and can be ordered with straight or 90° fittings. One CE-LX5-W is required to interface the single-channel sensor adapters LP/LX1-M or PZ/LX1-S with the eDART or CoPilot system.



#### SINGLE-CHANNEL PIEZOELECTRIC SENSOR CABLE 1645

The single-channel piezoelectric sensor cable 1645 (2 at right) is a PTFE/FEP coaxial cable suited for the injection molding environment. The cable is available in several lengths 0.2–2.0 m (7.9–78.7”). One 1645 is required to interface the 9204 with a Lynx single-channel piezoelectric sensor adapter and the eDART or CoPilot system.



#### MULTI-CHANNEL PIEZOELECTRIC SENSOR CABLE C-PZ/1645

The multi-channel piezoelectric sensor cable C-PZ/1645 (3 at right) is a PTFE/FEP coaxial cable suited for the injection molding environment. The cable is available in several lengths 0.2–2.0 m (7.9–78.7”). One C-PZ/1645 is required to interface each 9204 with a Lynx multi-channel piezoelectric sensor connector and the eDART or CoPilot system.



## SIMILAR PRODUCTS

RJG, Inc. offers a wide array of cavity pressure sensors for each application—piezoelectric, strain gage, single-channel, multi-channel, and digital.

### FLUSH MOUNT 2.5 MM PIEZOELECTRIC CAVITY PRESSURE SENSOR 6159

The 6159 (1 at right) flush mount piezoelectric sensor from RJG, Inc. is a single- or multi-channel, 2.5 mm sensor that can withstand forces of up to 29,008 psi (2,000 bar) and maximum temperatures of 392 °F (200 °C).



### SINGLE/MULTI-CHANNEL 3.5 MM PIEZOELECTRIC SENSOR 9210

The 9210 (2 at right) single- or multi-channel 3.5 mm piezoelectric sensor is a button-style cavity pressure sensor that can withstand forces up to 56 lb (250 N) and temperatures up to 392 °F (200 °C).



### SINGLE/MULTI-CHANNEL 6 MM PIEZOELECTRIC SENSOR 9211

The 9211 (3 at right) single- or multi-channel 6 mm piezoelectric sensor is a button-style cavity pressure sensor that can withstand forces up to 562 lb (2.5 kN) and temperatures up to 392 °F (200 °C).





## LOCATIONS / OFFICES

### USA

#### RJG USA (HEADQUARTERS)

3111 Park Drive  
Traverse City, MI 49686  
P +01 231 947-3111  
F +01 231 947-6403  
sales@rjginc.com  
www.rjginc.com

### ITALY

#### NEXT INNOVATION SRL

Milano, Italy  
P +39 335 178 4035  
sales@it.rjginc.com  
it.rjginc.com

### MEXICO

#### RJG MEXICO

Chihuahua, Mexico  
P +52 614 4242281  
sales@es.rjginc.com  
es.rjginc.com

### SINGAPORE

#### RJG (S.E.A.) PTE LTD

Singapore, Republic of  
Singapore  
P +65 6846 1518  
sales@swg.rjginc.com  
en.rjginc.com

### FRANCE

#### RJG FRANCE

Arnithod, France  
P +33 384 442 992  
sales@fr.rjginc.com  
fr.rjginc.com

### CHINA

#### RJG CHINA

Chengdu, China  
P +86 28 6201 6816  
sales@cn.rjginc.com  
zh.rjginc.com

### GERMANY

#### RJG GERMANY

Karlstein, Germany  
P +49 (0) 6188 44696 11  
sales@de.rjginc.com  
de.rjginc.com

### KOREA

#### CAEPRO

Seoul, Korea  
P +82 02-2113-1870  
sales@ko.rjginc.com  
www.caepro.co.kr

### IRELAND/UK

#### RJG TECHNOLOGIES, LTD.

Peterborough, England  
P +44(0)1733-232211  
info@rjginc.co.uk  
www.rjginc.co.uk